



SUPERLIFT N3588 CODING INSTRUCTIONS

CODING – DIP SWITCHES

The dip switches are located behind the snap off cover on the right hand side of the motor head.

1. Set the switches on the operator in a random pattern of your choice.
2. The switches in the transmitter are located under the battery cover on the back. Set the switches to correspond with pattern in the motor head
3. Press button on the remote

CODING – ROLLING CODE

1. Press and release black PROGRAMME button located on the receiver board, red pilot light will begin to flash
2. Press button on transmitter for 1 second and then release, red pilot light will flash for approximately 3 seconds
3. Press button on the transmitter for another second and the release, red pilot light will stop flashing
4. Press button on the transmitter once again for 1 second and then release, red pilot light will flash for approximately 3 seconds
5. When the red pilot light stops flashing the programming sequence is complete

For handsets with 2 or more buttons, the other buttons can be coded into other doors following the sequence above.

DELETING STORED CODES

Press and hold the programming button, red pilot light will come on. When the red pilot light switches off, all previously programmed transmitters will have been deleted.