


# TYPICAL COMMUNICATION CABLE IN MOST NEWMARK RVS

REMOVE SHROUDS AND LOOK FOR THE  
TELEPHONE STYLE CONNECTIONS

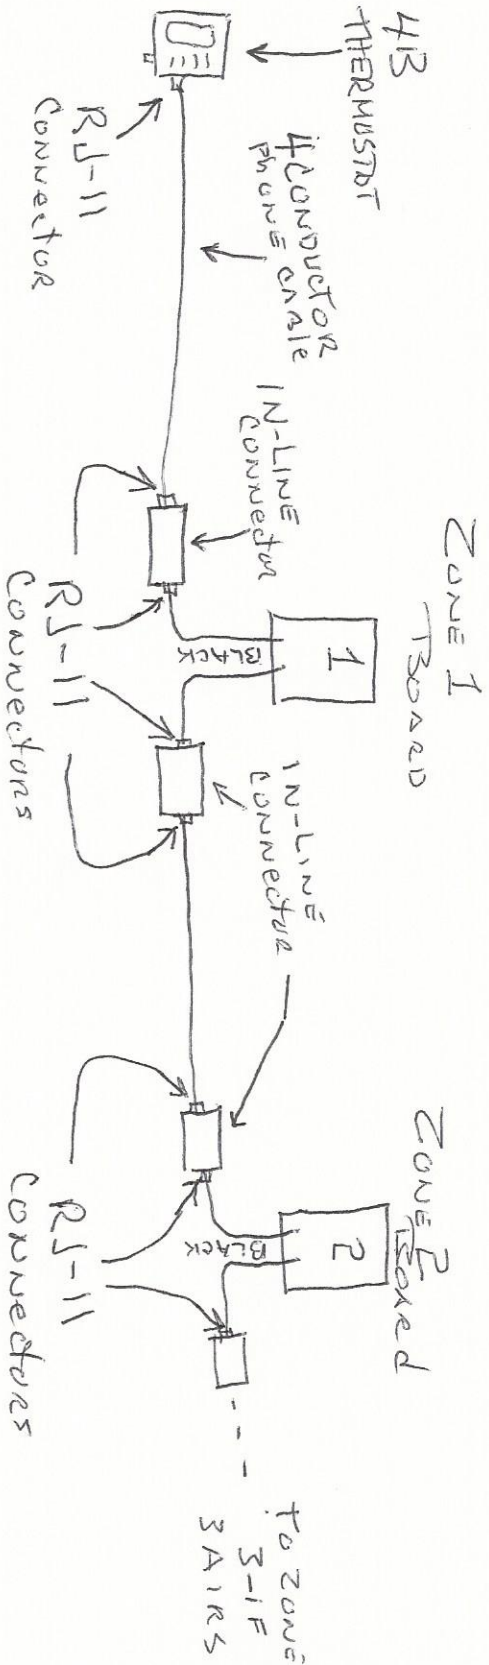

LOOK FOR MOISTURE AND CORROSION  
AT ALL THE RJ-11 CONNECTORS

REMOVE FUSE MARKED "AIR COND" IN MAIN  
RV INVERT FUSE PANEL BEFORE CLEANING THE  
CONNECTIONS AS SHORTING WILL BLOW THE  
ZONE I 3AMP FUSE - REPLACE IN-LINE  
CONNECTIONS IF CORROSION IS PRESENT.  
IF YOU MUST REPLACE THE RJ-11 CONNECTORS  
THE COLOR PATTERN MUST BE MAINTAINED ON THE  
REPLACEMENT