

Parts List

Item	Qty
Rubber Isolator	2
10 mm hex nuts	2
10 mm hex bolts	2
Circle Templates	2

Installation Instructions

1. Drill a $\frac{1}{4}$ " hole in headlight to mount an isolator as shown. Be sure to allow clearance so a nut can be installed. Once the hole is drilled insert the stud on the isolator through the hole and secure it to the tab with the 10mm hex nut. Do this for both ears even if only one is broken.




2. Install the headlight onto the mounting frame. Be sure to fully insert the tabs into the mounting pockets on the headlight



- When headlight is seated properly in the mounting frame use a sharpie marker to trace a partial circle around each isolator.



- Center the circle template with the radius drawn onto the frame and tape it into place. This will locate the hole that needs to be drilled. Center punch the mounting plate or simply just drill right through the center of the template.

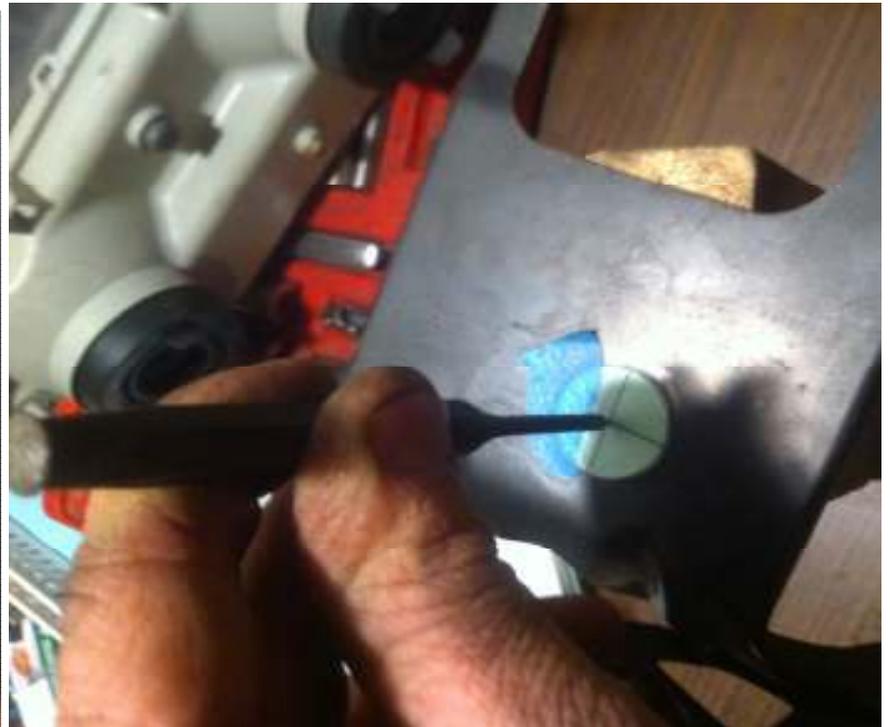

- Once the $\frac{1}{4}$ " holes are drilled in the mounting frame proceed to bolt the headlight to the frame by threading the 10mm hex head bolts into the isolators.

