

### Parts List

Item	Qty
Fan Jumper Harness	1
Relocate Plate	1
Plate Mounting Bolts	2
Nuts for fuse box bracket	2

### Fuse Box Relocate Installation Instructions


1. Remove the large clutch side panel and also remove the hood section for easier access.
2. Remove the front two bolts for the clutch guard.



3. Remove the two bolts that secure the coolant overflow tank to the sled.




4. Remove the fuse box from the bracket that's attached to the coolant reservoir so the bracket can be unbolted from the coolant reservoir. Once the bracket is removed the reservoir can be re-attached.

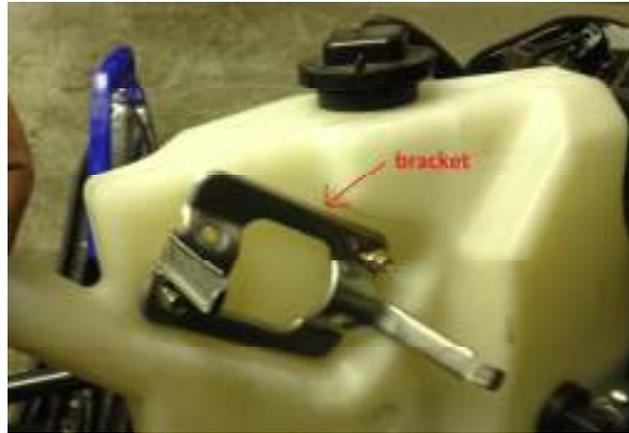

5. Using the two factory bolts and (2) nuts supplied attach the fuse box bracket to the BOP relocate plate.



6. Unplug the fan and attach the fuse box back on the factory bracket.
7. Bolt the BOP relocate plate to the frame using the supplied bolts. The bolt pattern in the relocate plate matches the threaded holes used for the clutch guard mounting bolts.

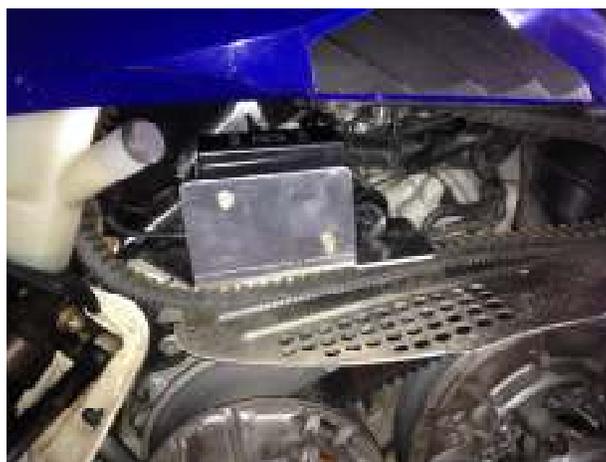

8. Reconnect the fan using the jumper harness supplied and then proceed to install hood and side panel.

