



Verity Print Field Guide

VERSION 3.0



Document Number 6651-008 A

Hart InterCivic Quality and Information Security Policy

Hart InterCivic is committed to consistently providing high quality products and services for its customers through adherence to its established hardware and software Quality Management Systems, complying with customer, statutory and regulatory requirements, and a commitment to continual improvement. Hart InterCivic is also committed to the integrity and the security of the information used in the product development process, in the products themselves, and in our management of customer data during the implementation process.

This DOCUMENT and the SOFTWARE, HARDWARE, and FIRMWARE to which it pertains contain confidential and proprietary information belonging exclusively to Hart InterCivic, Inc. No part of this publication may be modified, reproduced, stored in a retrieval system, or transmitted in any form, distributed by any electronic or mechanical means, photocopied, recorded, or otherwise reproduced or distributed without prior written permission from authorized personnel at Hart InterCivic, Inc. Any person receiving this document has a duty to take reasonable precautions preventing unauthorized use or disclosure of the contents.

Trademarks

Hart InterCivic and Verity are registered trademarks of Hart InterCivic, Inc.

Hart InterCivic disclaims any proprietary interest in the marks and names of others.



Hart InterCivic, Inc.
15500 Wells Port Drive
Austin, TX 78728

Document Number 6651-008 A

© 2019 Hart InterCivic, Inc.
All Rights Reserved

about this guide

This *Verity Field Guide* is a portable guide to using Verity Print.



Verity Print Field Guide



VERSION 3.0

contents

Verity Print..... 5

 setting up Verity Print 6

 setting up the ballot printer 6

 setting up the Verity Print 8

Verity Print orientation..... 11

 screen orientation..... 11

 report printer operation..... 12

printing ballots..... 13

other tasks and features..... 16

 resolving printing errors 16

 spoiling printed paper ballots 16

 printing a Ballot Count report 17

shutting down Verity Print 18

Verity Print

Verity Print is an on-demand ballot printing device; using Verity Print, you can print and issue blank paper ballots to voters using an attached ballot printer. The voter then hand-marks their ballot and casts it either using Verity Scan, or into a ballot box to be scanned centrally.



vDrives are used to transfer digital ballot styles from the Verity election definition software to Verity Print, and to transfer device audit log data from Verity Print to Verity software (vote data is not stored on Verity Print). vDrives are inserted into a standard USB port located in a locked and sealed compartment; each Verity Print has its own vDrive.

NOTE: *Software startup for each unit may take several minutes, due to security and data integrity checks that the Verity software performs. This process is included in the design of the Verity Voting System to verify the authenticity of the software before allowing it to operate.*

setting up Verity Print

setting up the ballot printer

1. Set up the ballot printer table and set the ballot printer on the table.

2. Plug in the square end of the USB printer cable into the printer. (The flat end will be plugged into the Verity Print.) ►



3. Insert the printer power cord into the printer and the other end into an outlet or UPS/battery backup. ►



4. Load the ballot printer with appropriate ballot paper. Note that the paper size will vary by election, and that the printer tray used may vary depending on the types of printers and accessories used in your jurisdiction. Follow local procedures.

Loading ballot paper in the main tray (Tray 1)

- a) Pull out the tray 1 drawer on the printer. ►



- b) Load paper in the tray. If necessary, push the blue tab and pull the paper guide to the appropriate setting (Letter/8.5"x11", or Legal/8.5"x14"). Paper sizes larger than 8.5"x14" require a tray extender (not available in all jurisdictions). ►



- c)** The main tray extender kit for 17"/20" ballots includes two parts:
- The front piece installs into the MP Tray door, and is used to support the ballots as they exit the printer.
 - The rear piece replaces the stock paper stop and rear tray extension cover. Once installed, the extender can support 14", 17", and 20" paper; however, the stock paper stop must be reinserted to support 11" paper.
- d)** Reinsert and close the paper tray. ►



- e)** Attach seal to paper tray at corner of paper tray door. ►



- 5.** Press the switch on the bottom right side of the printer to power it on.



setting up the Verity Print

1. Position the Verity Print on a table next to the ballot printer.
2. Follow local procedures to the remove tamper seal from the Verity Print handle, if applicable. Unlock the case (if locked). Open the case and remove the power brick and power cord from the storage compartment. Close the compartment and case. ▶



3. Plug the power cord into the power brick, and then plug the power brick into the back of the Verity Print (flat side up). ▼

IMPORTANT: Do not plug the power cord into the wall yet.



4. Plug the flat end of the USB printer cable from the ballot printer into the back of the Verity Print, with the notch facing up. ▼



5. Open the Verity Print case and lock the lid brace in place. ►



6. Unlock (A), unlatch (B), and remove the tablet (C). ▼



7. Seat the tablet in the cradle (A), tilt it back (B), and lock it in place (C). ▼



8. Verify the Verity Print device seals, per local procedure.

9. Plug the power cord into AC power. A green light should illuminate on the power brick when AC power is present. ►



10. Press the *red* button on the back of the Verity Print to power it on. ►

- During the power on process, a Power-On Self Test report will print on Verity Print's built-in printer. This report will indicate any hardware or connection issues; if any issues are noted, check connections and restart the device using the red power button.




11. *(if applicable)* If your jurisdiction uses the AutoBallot barcode reader: Wait until the Verity Print finishes powering up and displays the **Enter Poll Worker Code** screen, and then connect the AutoBallot barcode reader to the USB connection located on the vDrive compartment above the report printer. ►




Verity Print orientation

screen orientation

When powered up for the first time the device is used during a voting event, Verity Print should display the Enter Poll Worker Code screen. ►

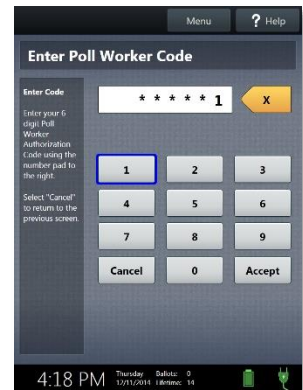

In addition to the date and time, the following appears at the bottom of the screen:



- **Ballots:** The number of ballots printed using the Verity Print for the current election; at the start of a voting event, this number should be zero.
- **Lifetime:** The number of ballots printed using the Verity Printed for the lifetime of the device (for all elections).
- **Battery and AC power indicators:** A green battery icon indicates the battery is connected; a green plug icon indicates AC power is connected. Specific battery power level is found on the Verity Print Power-On Self Test report.

NOTE: If AC power is not available, the device will automatically switch over to battery power, and a warning message will display. To dismiss the message and continue operating on battery power, touch "If the power is out, touch here to use battery".

When battery power is low, and AC power is disconnected, a warning message will appear on the device screen. Reconnect the device to AC power.

report printer operation

1. The thermal report printer is located on the right-hand side of the Verity Print. ►



2. To open the paper compartment: While standing in front of the device, pull the lever on the top of the printer cover towards you and lift up to open the paper compartment. ►



3. To replace paper: Place the new paper roll into the printer as shown. Paper must roll up from the bottom. ►



4. Close the printer cover. The paper must extend out from underneath the front edge of the cover. The white button can be used to advance the paper. ►



printing ballots

1. Setup and power on the Verity Print. **Confirm that you are running on AC power** (see page 11). Verify that the printer displays **READY TO PRINT**. ►

If the printer is offline, or in power save/sleep mode, press the **ONLINE** button to wake up the printer. ►




2. When prompted, enter the Poll Worker Code and select **Accept**. ►
3. Print the **BALLOT COUNT REPORT** in accordance with you local jurisdictions guidelines.




4. The Ready to issue ballots screen will display. Select **Issue a ballot**. ►


If your jurisdiction has **Verity AutoBallot**, you can use the barcode reader attached to the Verity Print to scan barcode labels produced by your electronic pollbook. When using AutoBallot, you will scan the barcode, skipping steps 3-6 of this section.

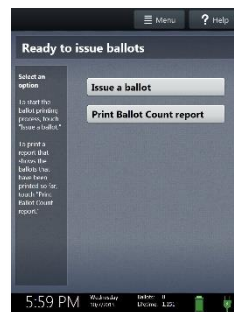

4. Choose the ballot language, and then select **OK**. ►

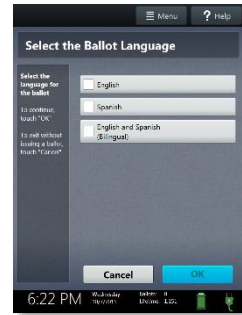


5. Choose the precinct, and then select **OK**. ►

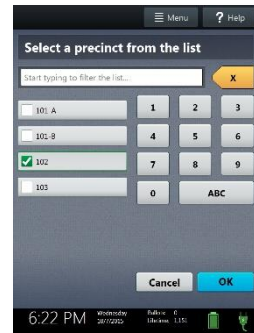

6. (*Primary Elections only*) Choose the party, and then select **OK**.

7. Verify that the correct precinct and language are displayed on the screen (and party, if this is a primary election), and then select **Yes, print the ballot**. ►

- To change the quantity of ballots to print, select **Change Quantity**, enter the number of ballots to print, and then select **Accept**. You may print up to 100 ballots at a time.

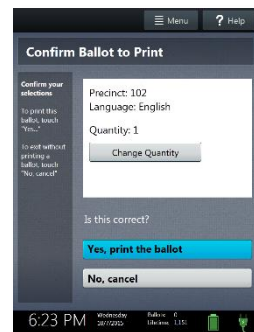

8. Wait while the ballots print on the attached ballot printer. ▶



other tasks and features

resolving printing errors

If an error occurs during printing (for example, the printer is out of paper), the nature of the error will be displayed on the screen. Follow the directions on the screen to resolve the issue. If you are unable to resolve the issue, contact your elections office. ►




spoiling printed paper ballots

To spoil a ballot that has already been printed from Verity Print, or to spoil a preprinted paper ballot, follow your local procedures (for example, filling out a spoiled ballot log and envelope).

printing a Ballot Count report

You can print a Ballot Count report on Verity Print at any time.

1. On the Ready to issue ballots screen, select **Print Ballot Count report**. ►

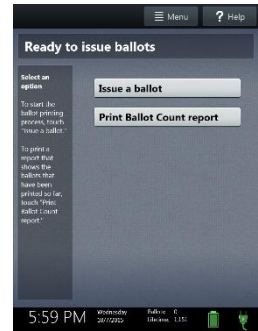


2. Wait while the report prints on Verity Print's built-in report printer. File the report according to local jurisdiction rules.

accessing Verity Print help

Verity Print is equipped with built-in help text that can be accessed from the touchscreen. The content of the Help screen will vary depending on the context.

1. Select **Help** at the top right of the Verity Print screen to access the Help screen. ►

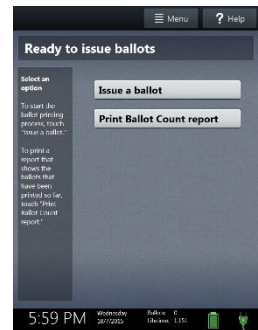

2. To exit the help screen and resume issuing ballots, select **Exit Help** on the bottom right of the Help screen.

shutting down Verity Print

Prior to shutting down Verity Print. Print the **BALLOT COUNT REPORT** in accordance with you local jurisdictions guidelines.

1. When you have finished printing ballots and reports, press the *red* power button on the back of the Verity Print to power it off. ►



IMPORTANT: Wait for the Verity Print to be completely powered down and showing a black screen if you will be unlocking and removing the tablet. If stowing the tablet, make sure to lock it in with the key *and* pull the blue latch down to secure it in place.

NOTE: The Verity power cord has a locking connector. When inserting the connector into a Verity device, it will make a small “click.” To disconnect the power cord, grasp the cord at the base of the black connector molding where it connects to the Verity device, and slide back the sleeve. This will unlock the connection so that the cord may be removed.

2. Follow your local jurisdiction’s guidelines, including chain-of-custody procedures, when transferring equipment to your central counting location. If you are leaving equipment in place, be sure to properly secure all equipment, preferably behind a locked door. You may use the space below to document local transfer procedures.

local procedures

notes:



©2019 Hart InterCivic
All Rights Reserved

Hart InterCivic and Verity are registered trademarks of Hart InterCivic, Inc.